



COASTAL AMUSEMENTS INC.

"...manufacturers & distributors of coin-op redemption games..."

CD-ROM DRIVER INSTALLATION INSTRUCTIONS FOR 623 MOTHERBOARD (1 CD)

Detailed below are instructions for installing then DRIVER CD ROM update. *The CD upgrade will only update GT games containing software versions US 2.3 to 3.2. , When replacing a 531 or 630 Motherboard and have software version 4.0 or 4.1 Slingo, this installation is not required.*


THIS PROCEDURE WILL TAKE APPROXIMATELY 3 minutes.

Upright Access:

To access the electronics tray with the CD-ROM connection, open the front black cover of the game. Pull out the electronics tray and secure it in a horizontal position.



Countertop Access: Remove the blue or black cover off the game and place to the side for re-installation later. Put the cover on a protective surface to prevent scratching of the painted finish. The CD-ROM connection is located at the back center of the game.

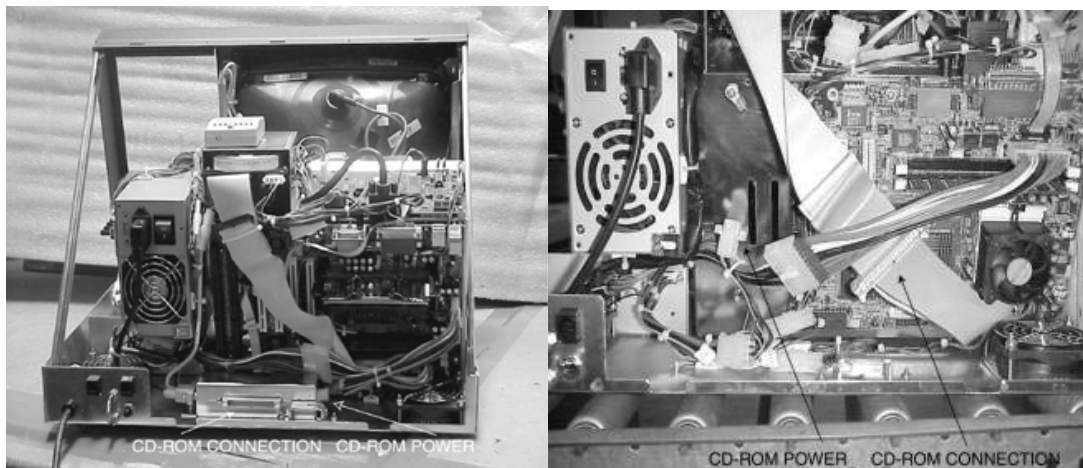

1935 Swarthmore Ave, Lakewood, NJ. 08701 Phone: (732) 905-6662 Fax: (732) 905-6815

E-mail: sales@coastalamusements.com

Website: <http://www.coastalamusements.com>

INSTALLATION Upright & Countertop CD-ROM Connection:

Step 1: Make sure the power is off to the game.

Step 2: After you have gained access to the electronics tray in either the upright or countertop games locate the CD-ROM connector. Refer to Pic 01 for the upright and pictures 02 & 03 for the countertop. The CD-ROM cable is a gray 40-pin ribbon cable. The countertop model may have either of two connection points, verify which connection point you have by referring to Pic 02 and Pic 03

Step 3: Install a 40-pin ribbon cable into the customer supplied CD-ROM drive and then into the CD-ROM connection point on the game. The CD-ROM ribbon cable will only fit into the connector one way and that is with the red stripe facing the same direction as on the game. Make sure that the red stripe is facing the power connection side on the customer supplied CD-ROM drive.

Step 4: Plug the 4 Pin AMP connector into the customer supplied CD-ROM drive. The square 4-pin connector plugs into the game. Refer to Pic 01 for the upright power connector location and Pic 02 and Pic 03 for the countertop power connector location.

Step 5: Turn main power on.

Step 6: Open your CD-ROM access door and place the Driver CD into the compartment. **(Do not close compartment)**

Step 7: Turn main power off. (Wait 5 seconds) then turn the main power on, the CD-ROM door will close and begin installing CD.

Step 8: When software installation of CD is complete, your screen will read: **One Sound ver 2 Updated, eject the CD and reboot the system,** Open the CD-ROM door and remove the CD from your CD-ROM drive.

Step 9: Turn main power off and disconnect the CD-ROM drive, ribbon cable and the CD-ROM power cable from the game.

Step 10: On the upright model slide the electronics tray back into the game and close the front black cover. On the countertop game, re-install the blue back cover.

Should you have any problem with the installation procedure please call our tech department at (732) 905-6662 between the hours of 8AM to 4:30PM EST.