



# Coin Comparator Set up & Maintenance

## Rear View of Model S-071CS Coin Comparator

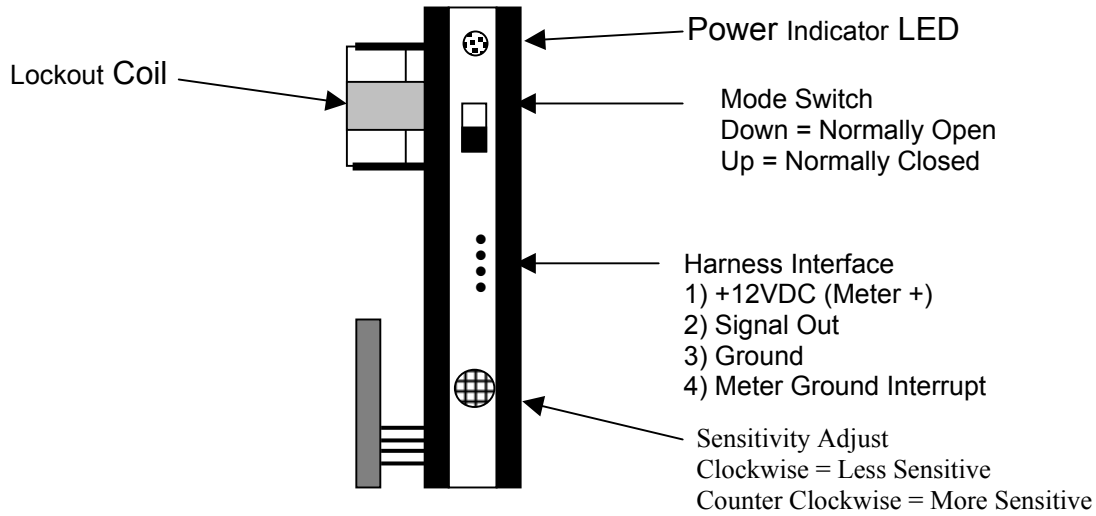

## Bottom/Side View of Model S-071CS Coin Comparator

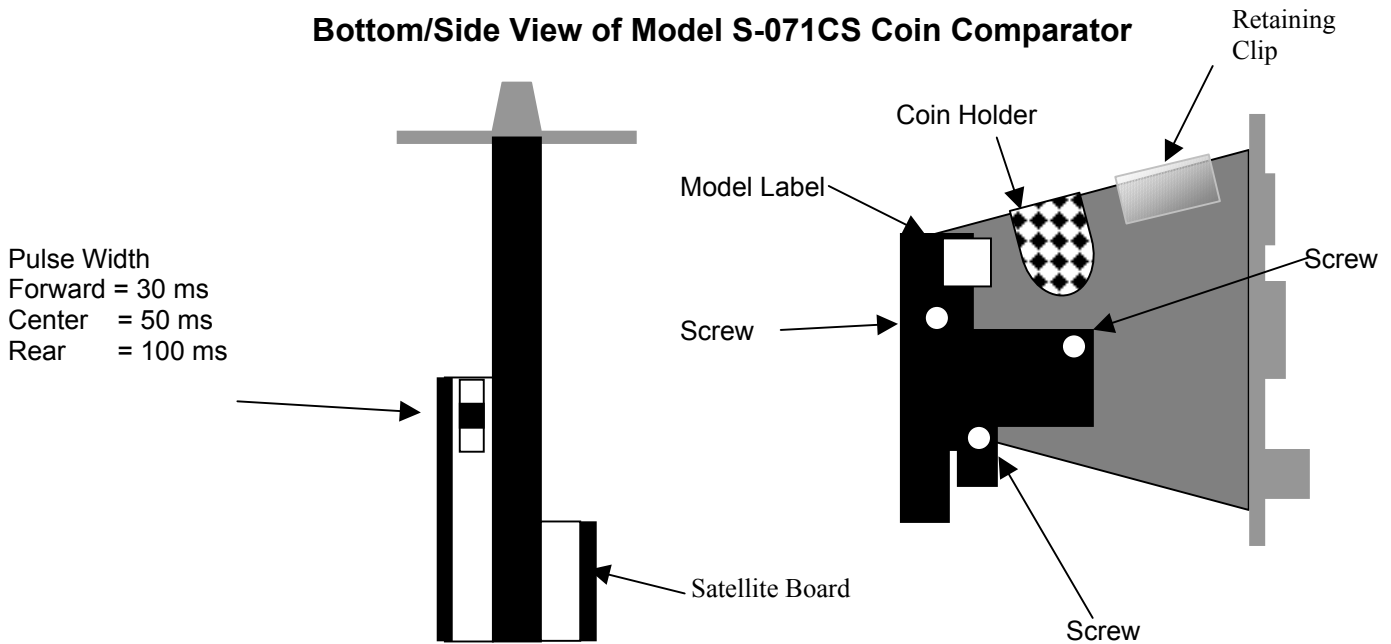

- 1) Coin **Must** be inserted in holder or comparator will not operate!
- 2) Contact setting default is Normally Open. (Down)
- 3) Pulse width setting default is 50 ms (Center)
- 4) Removing Clip accesses coin entry and return path.
- 5) Remove Holder (lift off spring) to access coin path.
- 6) Removing screws accesses optical sensors LED's 4 5 & 6 clean gently with rubbing alcohol & "Q" tip. (Sensor LED's 1&2 are located on satellite board remove two screws to access clean as above.) **Do not alter alignment of sensor LED's!**